

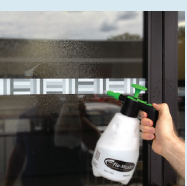
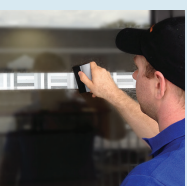


Self Installation Instructions

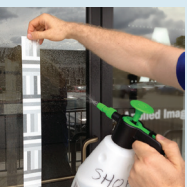

1. Clean glass area thoroughly, removing all grease, dust and dirt particles.
2. Make your mounting solution: 3 drops of fragrance and color free dishwashing soap per half gallon of water.
3. Spray solution onto the glass where the graphic will be applied.
4. Remove the liner from the graphic film. While removing the liner, spray solution onto adhesive side of graphic. Be careful not to have the adhesive side stick to itself.
(Tip: To separate the film from the liner use two pieces of tape one on each side of the band press together and pull apart)
5. Place graphic onto wet area of glass where it will be finally positioned. While glass surface and graphic is wet, the film can be moved and repositioned into its exact placement. Spray solution onto face of graphic after positioning. This is for scratch prevention!
6. Start from center of graphic, squeegee excess water from the film by applying pressure in horizontal and vertical strokes. Apply solution to face of graphic as needed while squeegeeing.
7. Trim .125" away from any gasket or silicone joints, also be careful not to scratch the glass.
8. Once water is completely removed from behind graphic film, you are almost finished! After the graphic is set, once again spray solution onto face of graphic and clean completely with a clean, soft towel. Glass will be completely dry in 1-2 days.

For any additional questions or further assistance please call your distraction graphics professionals at: 732-252-0601 or 844-344-9902

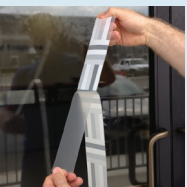